

How to upload server RPC

# FELIX printers

21 June 2024

Revision 1





# 1 Update RPC



The RPC is important because it provides the touchscreen with all information and calibrations for the printer.

## 1.1 RPC upload


- Select the “home” button (1) on the top of the screen in the web interface.

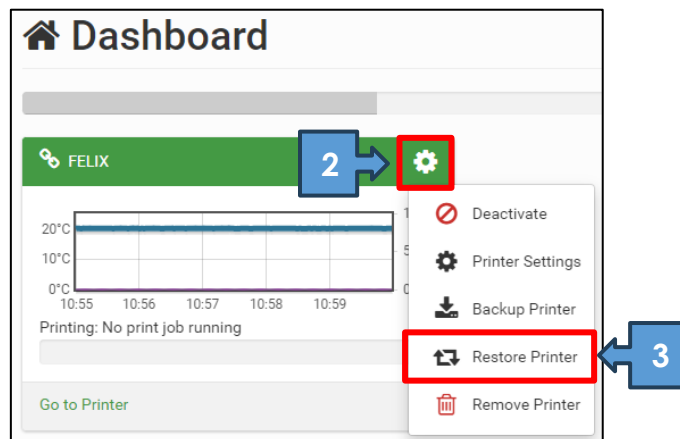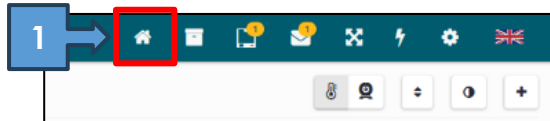

- Select the “Gear” icon (2) in the right top of the green field.
- Select “Restore printer” or “Replace printer settings” (3).
- Select “Select Backup” (4) and choose the correct .rpc (5 = example) for your machine. You can find this RPC in the software update package that can be downloaded from the felixprinters website (See page 1 of this manual).
- Make sure you check the box to “Replace Configuration” (6).
- After that select “Restore” (7).

 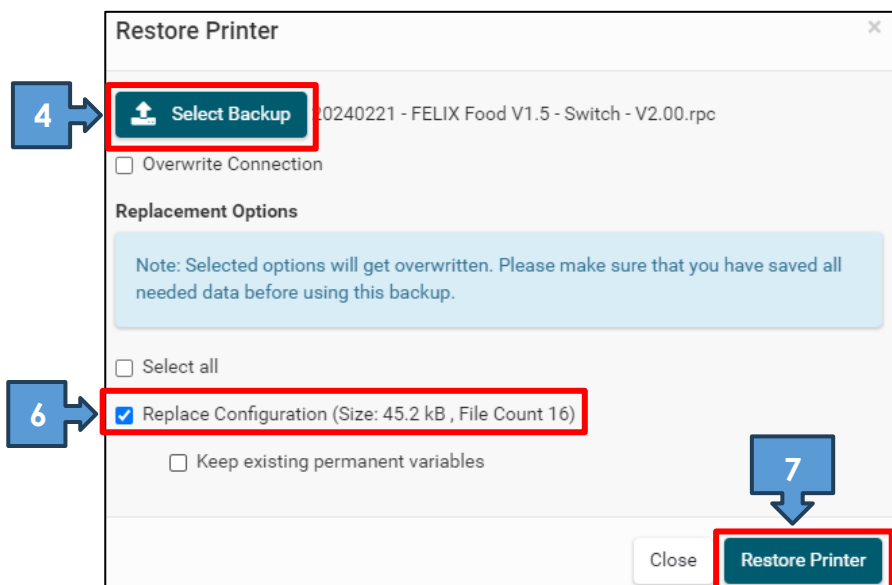

- Wait until the printer is showing a green status (8).

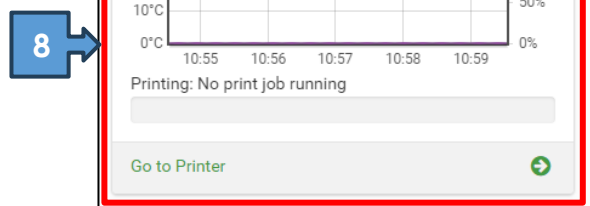

You are now be able to use the FELIX printer with the new server RPC.

If you are unable to continue or have any questions, you can check at the support section of our website or you can contact us directly:

Website: [www.felixprinters.com/support](http://www.felixprinters.com/support)

Email: [support@felixprinters.com](mailto:support@felixprinters.com)

Telephone: +31 (0)30 30 31 387

Address: Zeemanlaan 15, 3401MV IJsselstein, The Netherlands

Kind regards,

FELIXprinters