


Software adjustments for FELIX 0.5 mm nozzle

In both FELIXbuilder and Repetier Host the diameter of the nozzle can easily be adjusted. In this quick guide the process of changing the software settings will be explained.

FELIXbuilder – Go to Profile editor, Machine settings, Extruders configuration and change the 'Calibrated wirewidth' to 0.5mm. Click on OK.

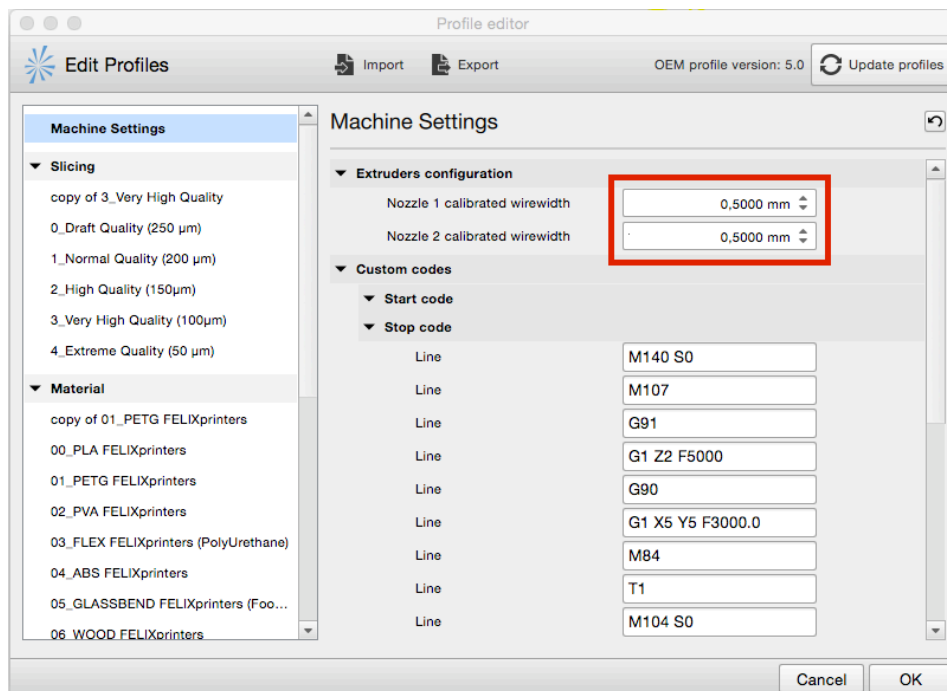

Repetier Host - Go to Config, Printer settings and change the 'Diameter' in the 'Extruder 1' (and / or Extruder 2) to 0.5mm. Click on OK.

